


# Quick Start Guide Prowise All in One PC

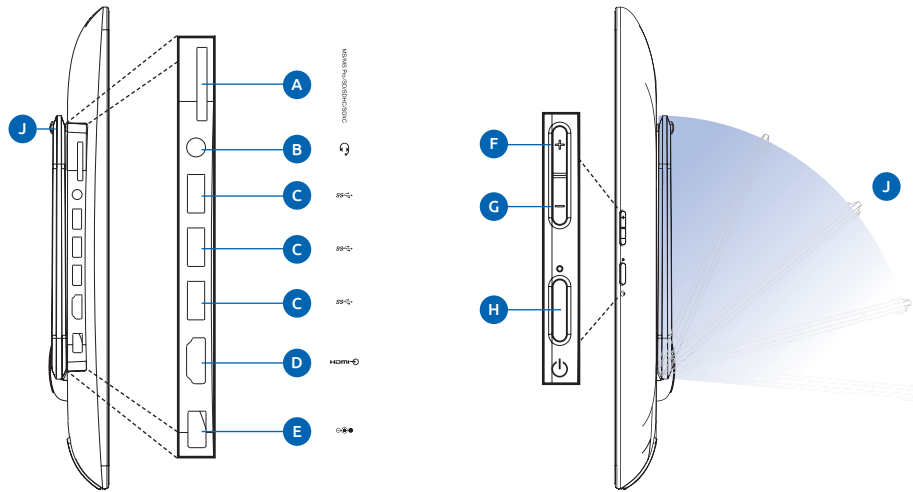

**A** MS/MS Pro/SD/SDHC/SDXC

**B** Headphone socket  
Hoofdtelefoonaansluiting  
Kopfhöreranschluss

**C** USB 3.0 port  
USB 3.0 aansluiting  
USB 3.0 Anschluss

**D** HDMI-in port  
HDMI-in aansluiting  
HDMI-in Anschluss

**E** Power Connection  
Stroomaansluiting  
Netzanschluss

**F** Volume +

**G** Volume -


**H** ON/OFF switch / Power LED

Aan-/Uit-schakelaar /  
statuslampje

Ein-/Ausschalter /  
Betriebsanzeige

**I** Home Touch Button  
Home Touch Button  
Home Taste

**J** Stand  
Standaard  
Ständer

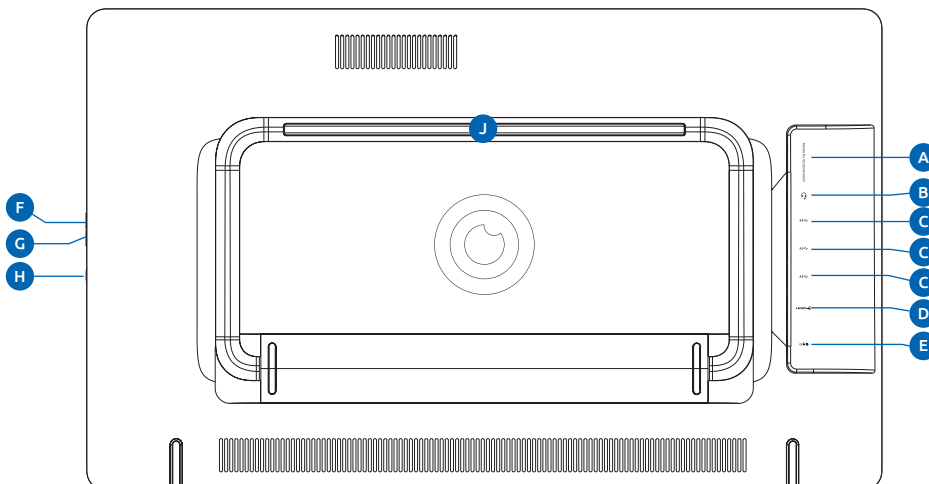

For more information please visit [www.prowise.com](http://www.prowise.com)  
Voor meer informatie gaat u naar [www.prowise.com](http://www.prowise.com)  
Für mehr Informationen besuchen Sie bitte [www.prowise.com](http://www.prowise.com)

