



Update Touch frame TSx G3 v5.3.7

1. Download the Touch Device Detection Software (V2.1.5) from WeTransfer and extract it:
<https://we.tl/t-tuhEXYEWcD>
2. Download the correct touch firmware for the correct inch size of the screen:
65": <https://we.tl/t-sRtBitvkS8>
75": <https://we.tl/t-Nyh8lvkbN3>
86": <https://we.tl/t-dv2yV2r8O5>
3. Open het programma 'Touch Device Detection Software' in de map '01 Touch Device Detection Software (V2.1.5)'.

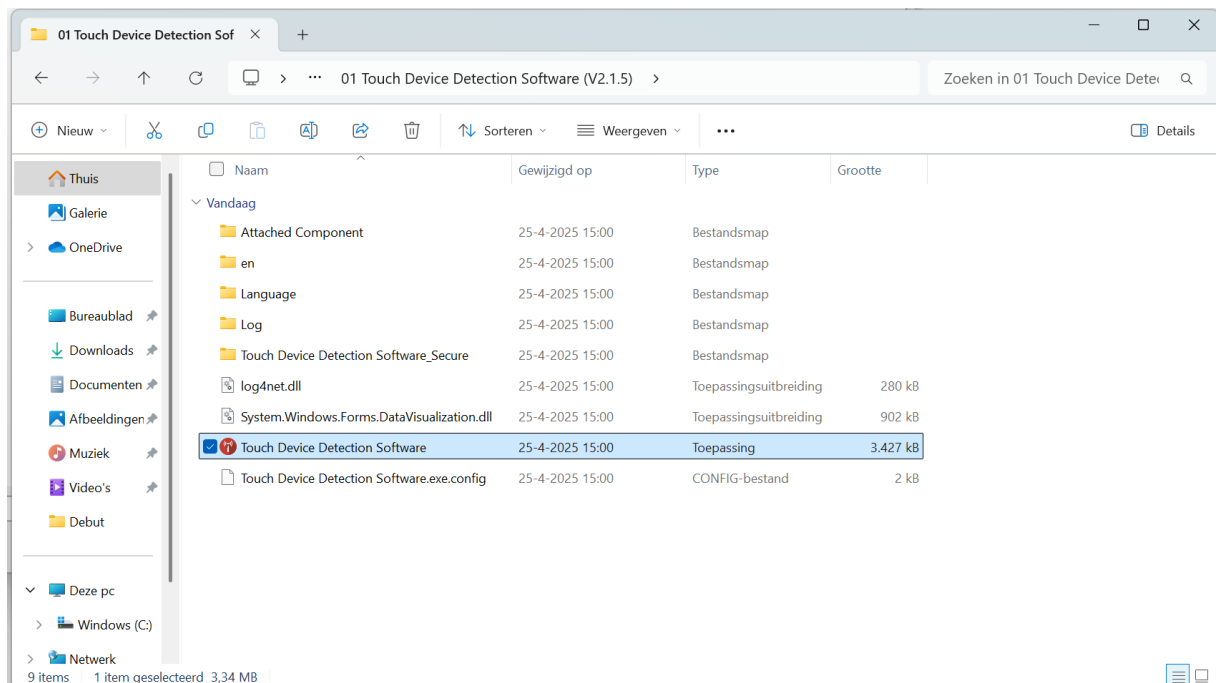


4. Click on Firmware Update

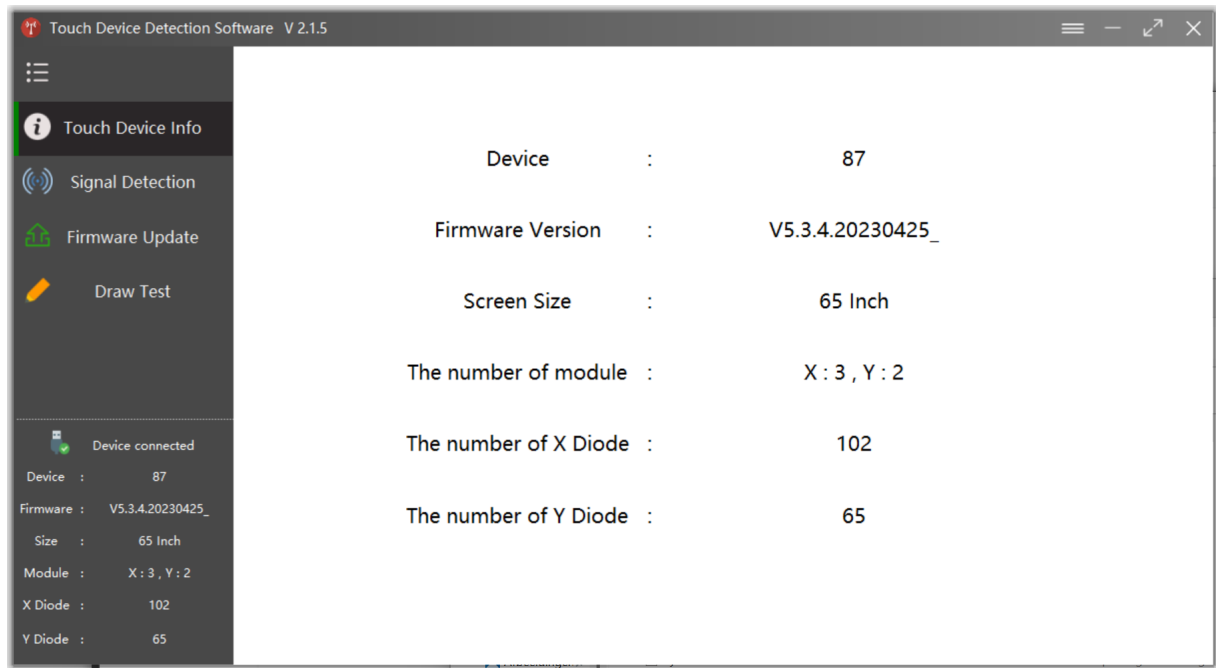


5. Click on Open Firmware




6. Select the downloaded firmware file and click on open

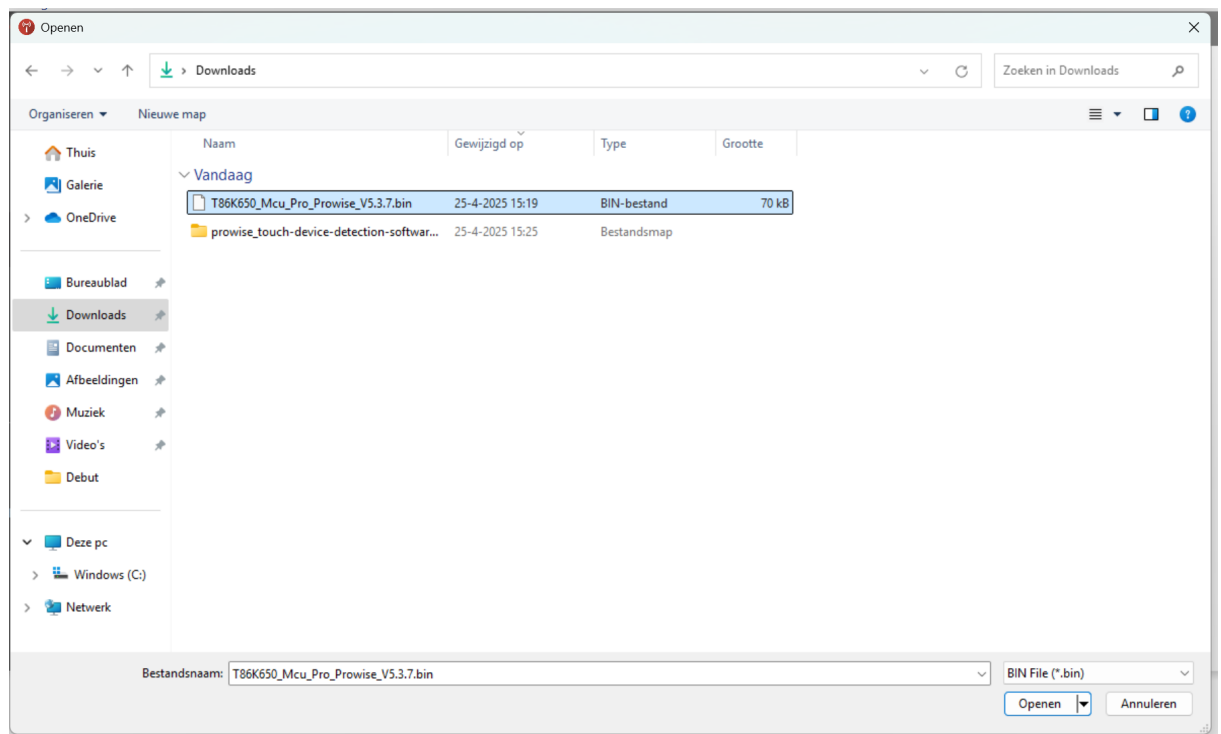

7. Click on Update

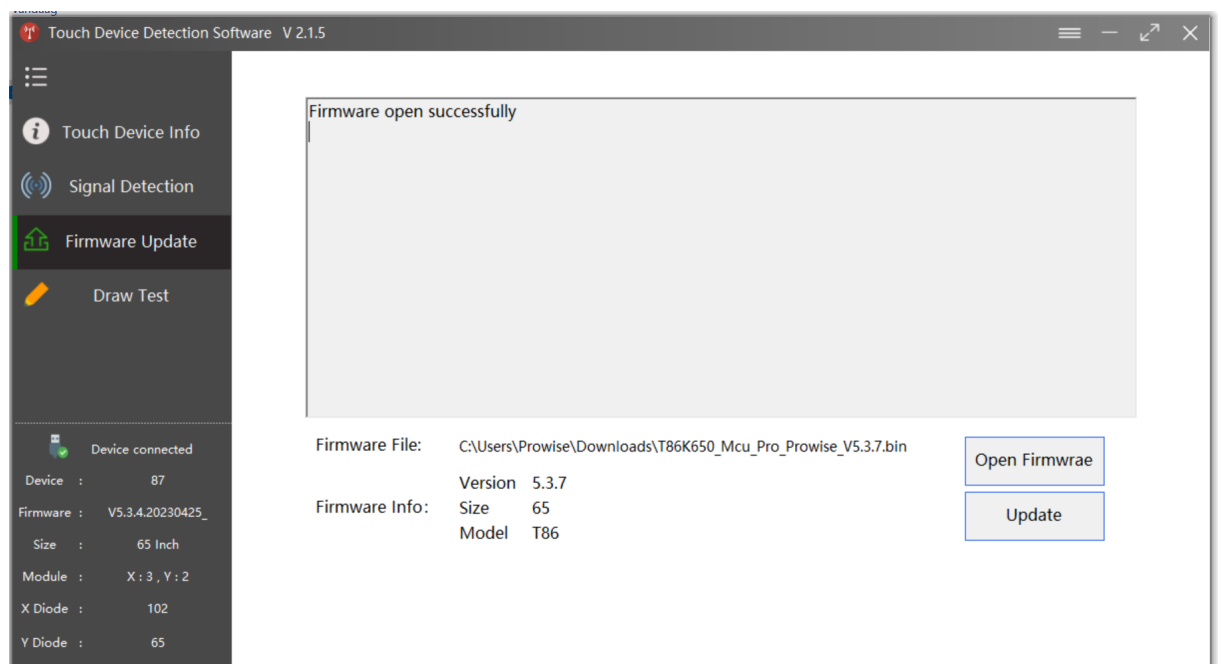

8. Click on OK

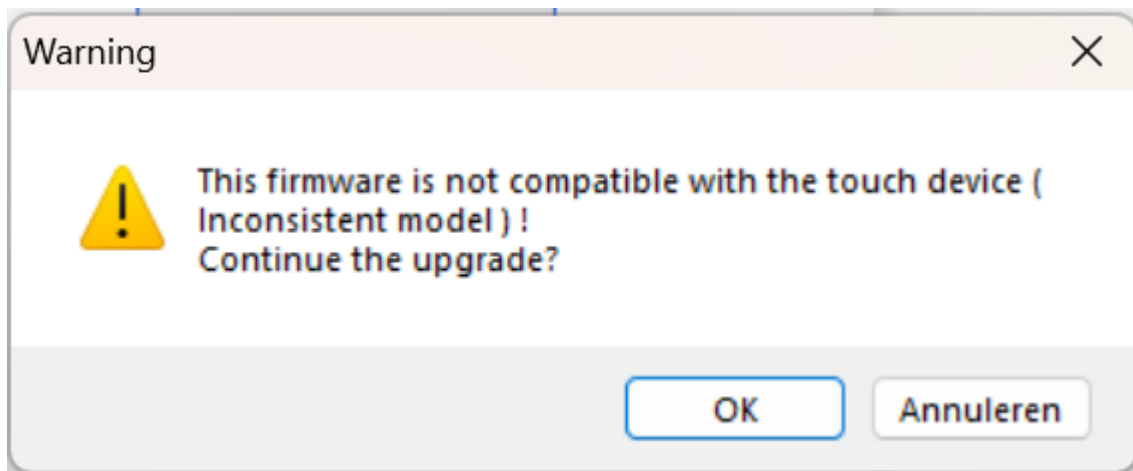

9. Restart the screen after the programme indicates that the firmware was successful.

