


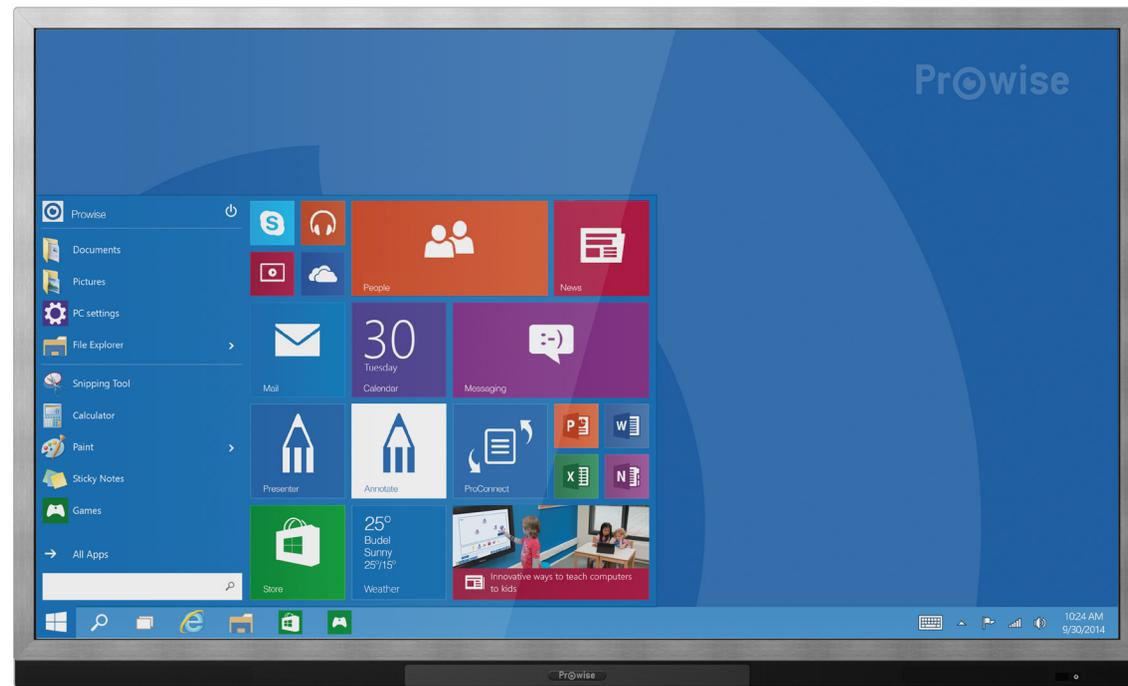


Quick Start Guide

Pro Line Multi-touchscreen and ProWrite Pen



Pro Line Multi-touchscreen

Buttons and ports

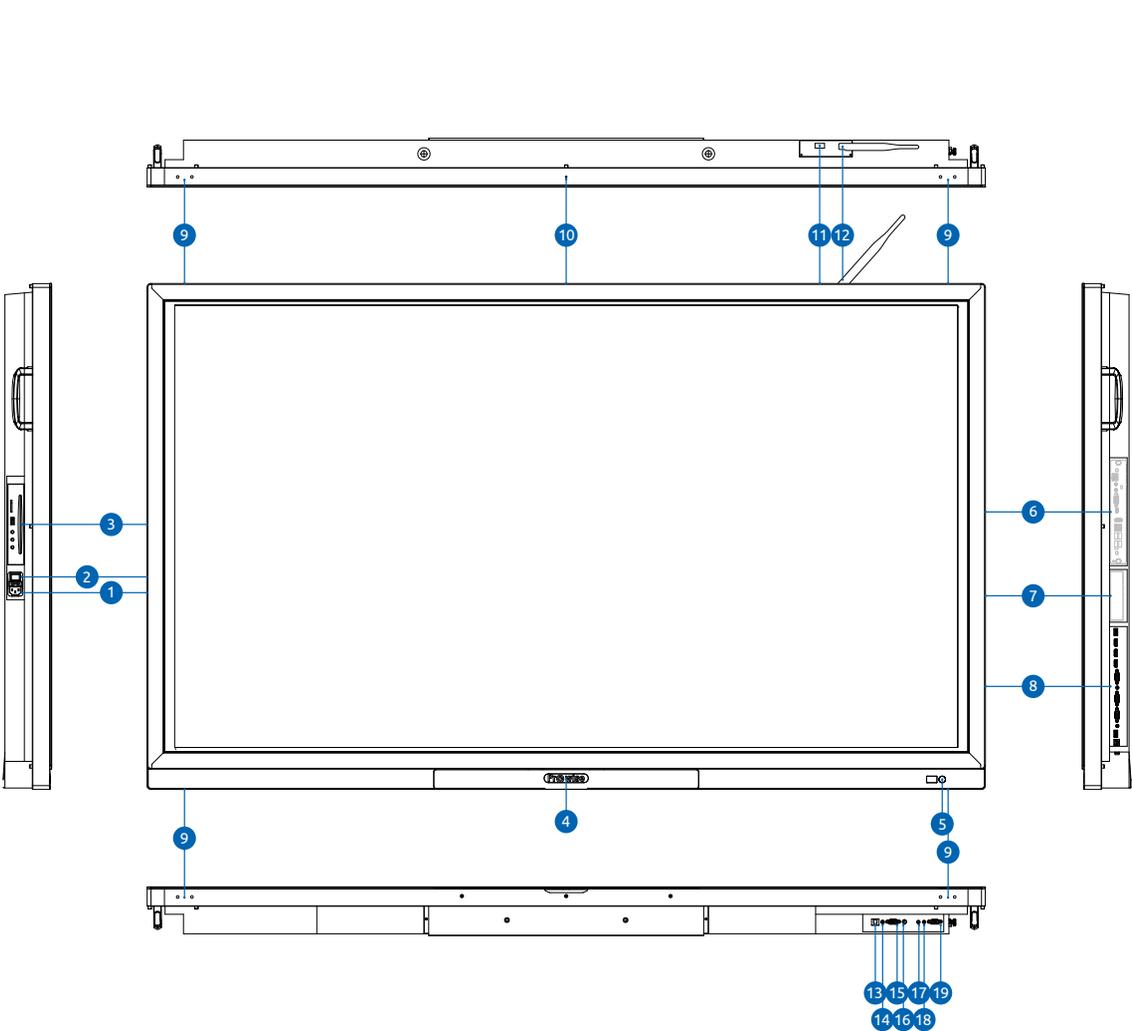


- 1 AC IN
- 2 Main Power Switch
- 3 Blu-ray Module
- 4 NFC Reader/Writer
- 5 Power Button
- 6 PC Module slot
- 7 Module slot for future updates
- 8 Integrated connections
- 9 Attachment points for connecting whiteboard panels
- 10 Webcam mount
- 11 USB port 2.0
- 12 ProWrite Antenna
- 13 LAN port for OTA updates
- 14 Analog out (audio)
- 15 RS232
- 16 Digital out (audio)
- 17 AV IN
- 18 Audio IN for VGA 3
- 19 VGA IN 3




Pro Line Multi-touchscreen

Integrated connections

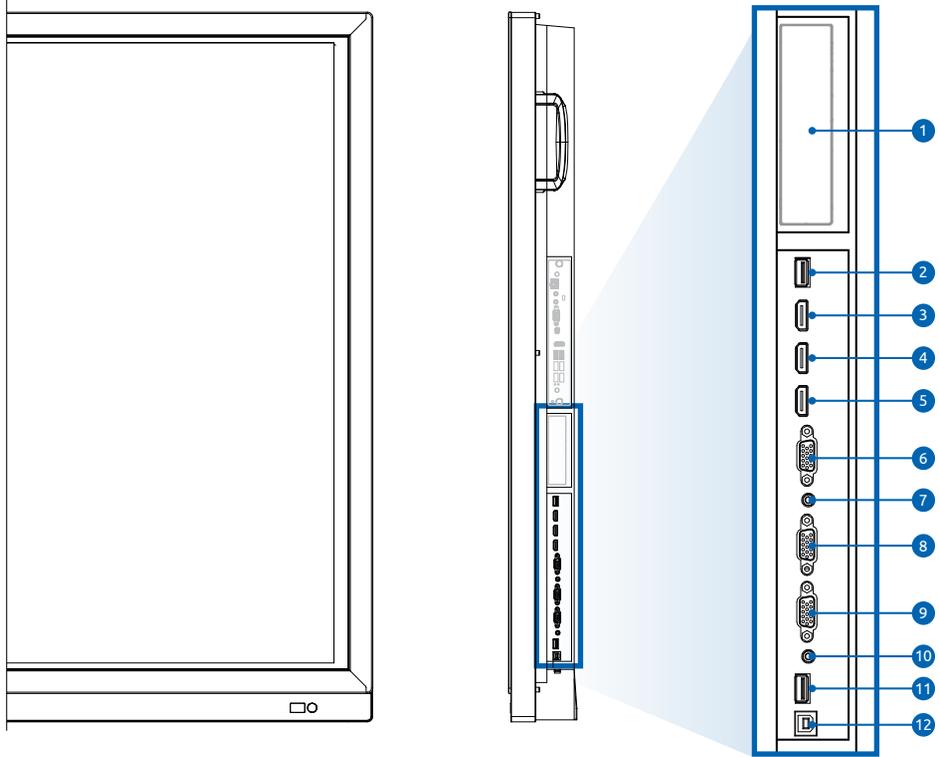

- 1 Module slot for future updates
- 2 USB 2.0 update Port
- 3 HDMI IN 1(4K)
- 4 HDMI IN 2(2.0 4K)
- 5 HDMI IN 3(MHL)
- 6 VGA passthrough
- 7 AUDIO IN for VGA 1
- 8 VGA IN 1
- 9 VGA IN 2
- 10 AUDIO IN for VGA 2
- 11 USB 3.0
- 12 USB Touch for external PC/ Mac

Pen Tray

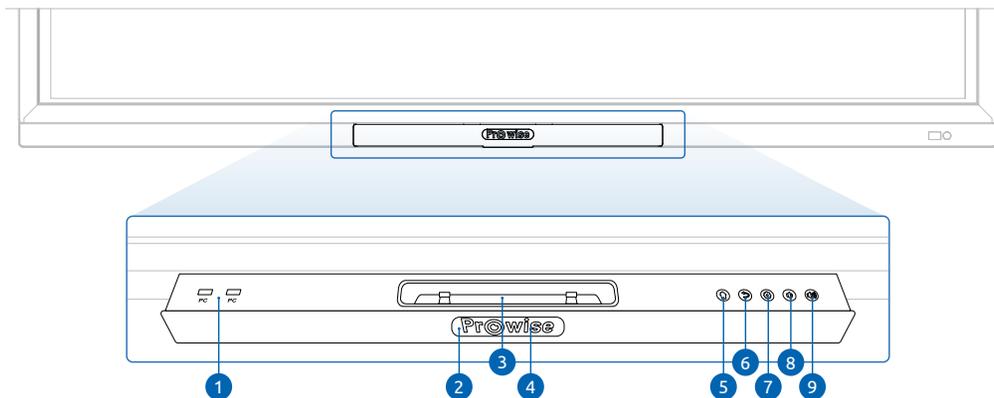

- 1 USB 2.0 poorten
- 2 NFC Sensor
- 3 Pen Charger
- 4 Swipe to activate screen
- 5 Home Button
- 6 Back Button
- 7 Settings Button
- 8 Volume - Button
- 9 Volume + Button

ProWrite Pen

Activating, deactivating, connecting and charging

Technical requirements for ProWrite

Required hardware

- Prowise Pro Line Touchscreen
- Prowise ProWrite Pen
- Prowise PC Module (all versions)

Required software:

- Prowise Presenter Windows Desktop Application*
- Touch Service Tool - Pro Line touchscreen (available at www.prowise.com)*

* This software is available for Windows 7, 8 and 10

Activating

The ProWrite Pen will be delivered inactive to keep the battery fully charged. Before use please activate the pen by:

- Press the top button (A) and hold this button down
- Simultaneously, press the Up/Down button in the following sequence: Down (v), Up (^), Down (v), Up (^)
- LED (B) turns green, indicating the activating process has succeeded.
- If failed, please repeat the above steps

Deactivating

- Press the top button (A) and hold this button down
- Simultaneously, press the Up/Down button in the following sequence: Up (^), Down (v) Up (^), Down (v)
- LED (B) turns red, indicating the deactivating process has succeeded
- If failed, please repeat the above steps
- To check this: Press Top button (A), when LED (B) is dimmed red, the ProWrite Pen is deactivated

Connecting

The ProWrite Pen is already connected to your Pro Line touchscreen upon receipt. Before use simply activate the pen. However, in case the ProWrite Pen is not working, please try connecting the pen again to reestablish the connection:

- Simultaneously, press the top button (A) and the Up button (^) for 2 seconds
- LED (B) will start flashing green rapidly
- Hold the pen near the ProWrite antenna, located at the top right corner of the touchscreen
- LED (B) will flash 3 times at a slow pace, indicating the connection has succeeded
- If failed, please repeat the above steps

Charging - LED indications

When the activated ProWrite pen is in the pen tray:

- Flash red-green: Battery is charging
- Solid red: Battery is fully charged
- No light: Battery is empty

