


Assembly Manual **Prowise Mobile lift**

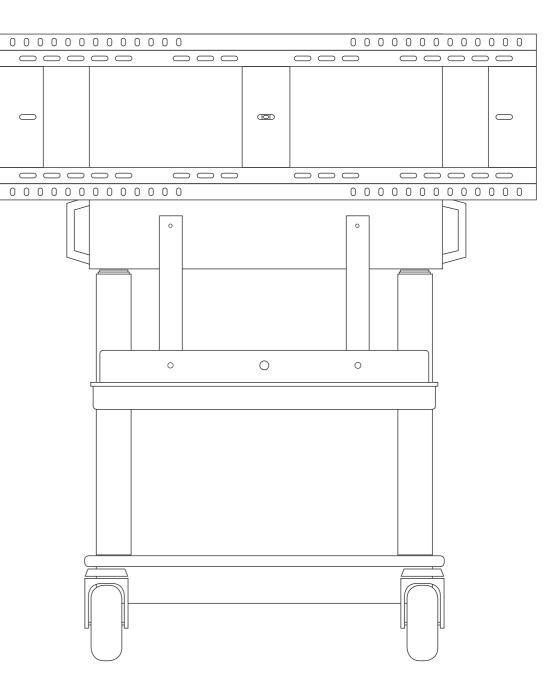


PrOwise


Prowise B.V. Luchthavenweg 1b 6021 PX Budel The Netherlands Tel. +31 495 49 71 10 info@prowise.com


www.prowise.com

© Prowise 2014


Assembly instructions

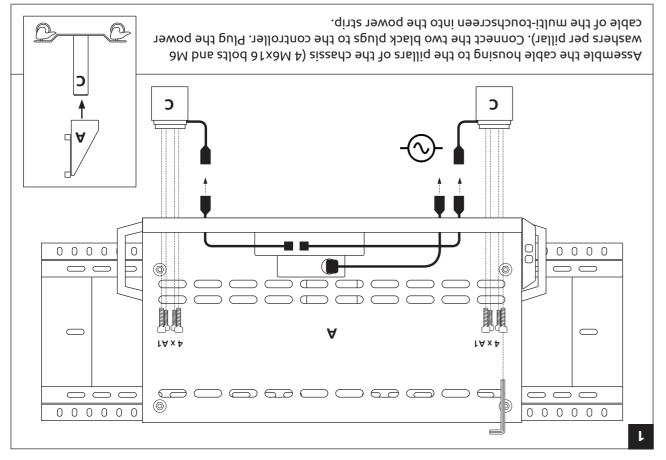

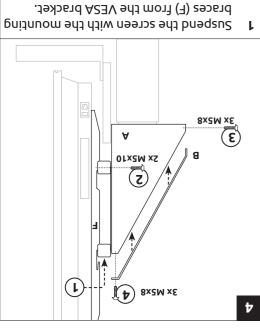




.crews. beilqquz əht hiw (A) pnizuon əldes əht **3-4** Secure the back plate (B) to the back of SW9JJS

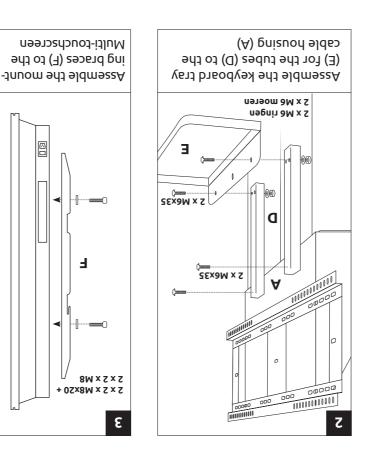

Please only use supplied parts

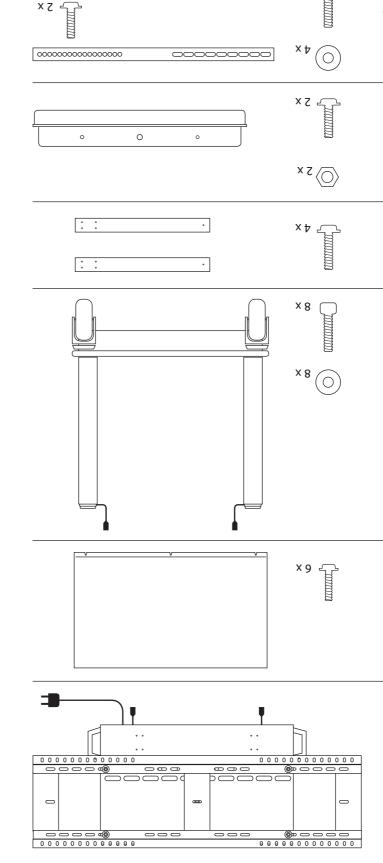

ХÞ

Prowise

pəpnjouj

- :diw pnisuod sldeD A
- VESA bracket
- Controller - Controll unit
- Power strip

plate to the cable housing • 6 x M5x8 bolts (PH2) for assembling back B Back plate for cable housing

- .ereight adjustable pillars. C bne sløøhv 4 vith 4 wheels and 2
- бuisnoy • 8 x M6x16 bolts for assembly of the cable

- 4 x M6x35 for assembly on VESA bracket D • Tubes for assembly of the keyboard tray
- 2 x M6x35 for assembly on tubes E • Keyboard Tray
- on VESA bracket 2 x M5x10 bolts to secure mounting braces • 4 x M8x20 bolts and 4 x M8 washers multi-touchscreen F • 2 mounting braces for assembly Prowise